


Alspec Battery Cover Assembly Instructions

Revision 1.1 September 2026




Components are supplied in cartons

Available in the box: **Front panel and Accessories**

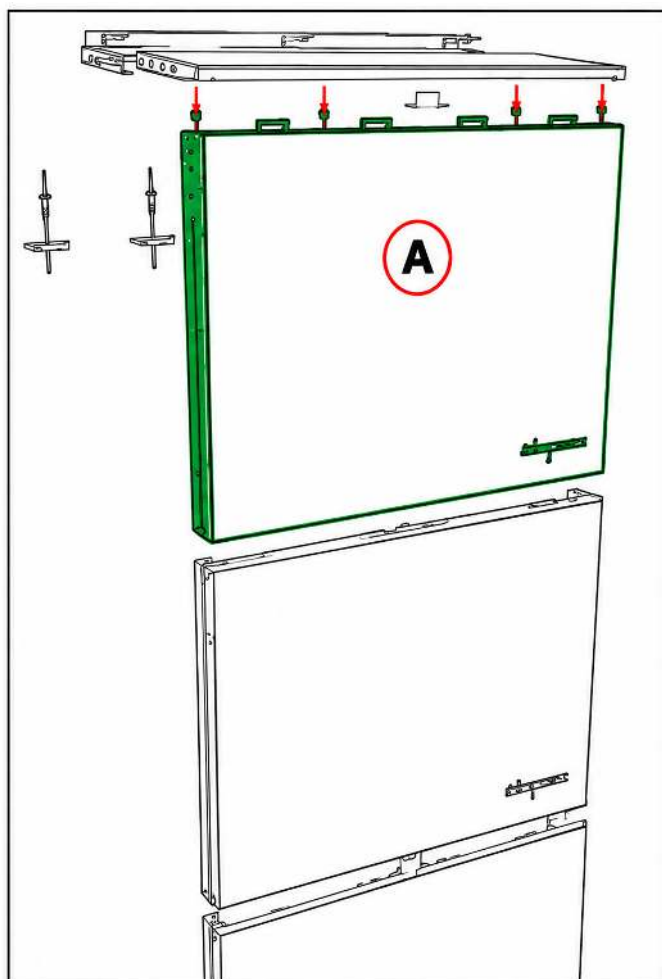

Available in the box: **Lids, Ground Brackets and Accessories.**

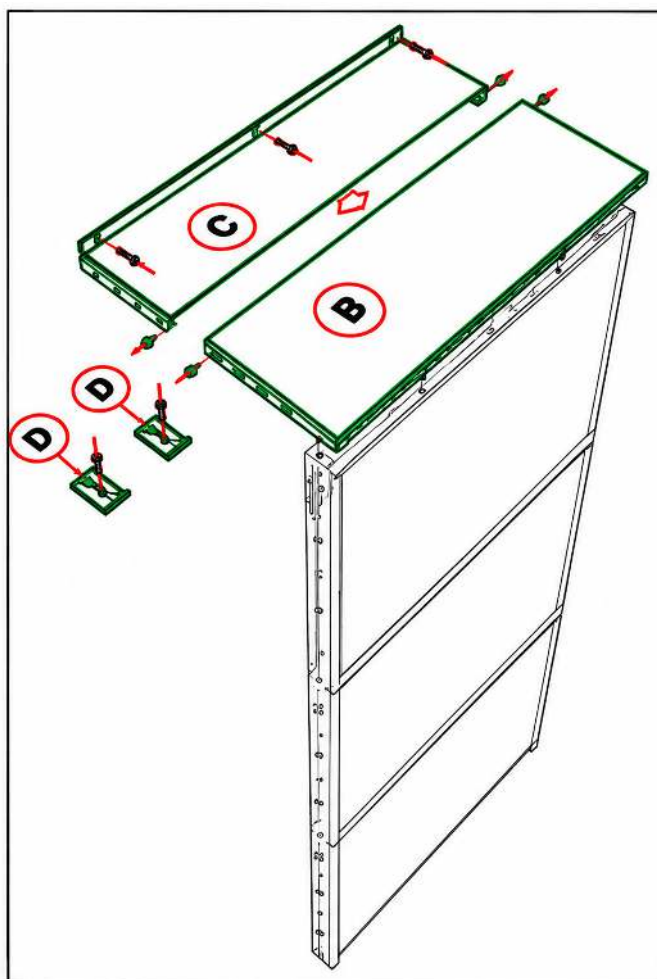


Alspec Battery Cover is available in three configurations



Single	Double	Triple
725H X 850W X 450D (Min. 285D)	1425H X 850W X 450D (MIN. 285D)	2125H X 850W X 450D (MIN. 285D)
To suit Small Battery < 630H	To suit Medium Battery < 1330H	To suit Large Battery < 2030H

The diagrams below illustrate the position of the Alspec Battery Cover on a building, showing Parts (A), (B), (C) and (D).

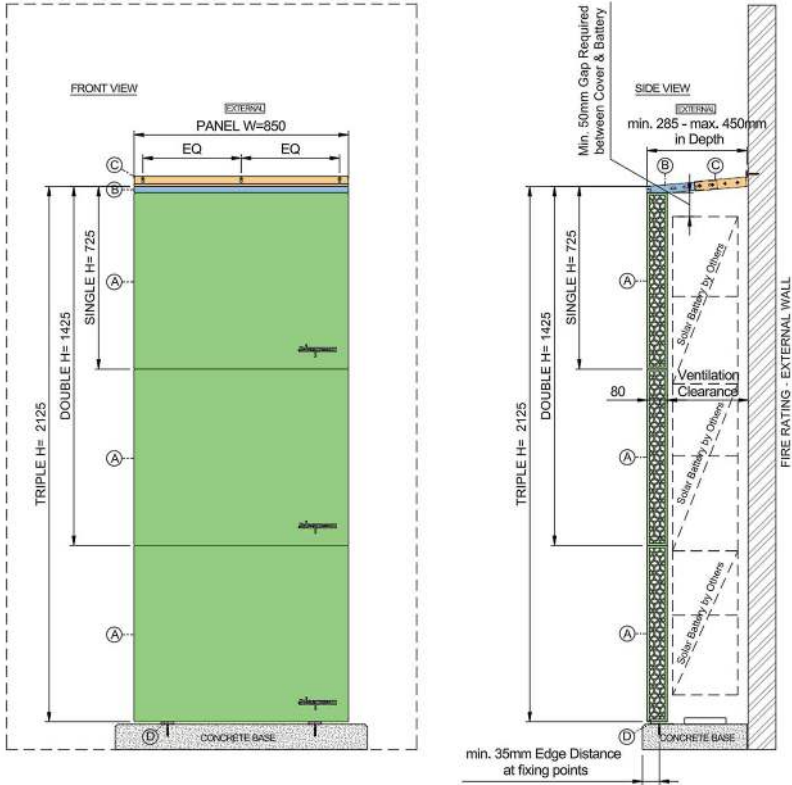

Installation Procedures

STEP 1 INSTALL GROUND BRACKETS (D)

Fix 2x Ground Brackets (D) securely to concrete base using concrete pin anchors.

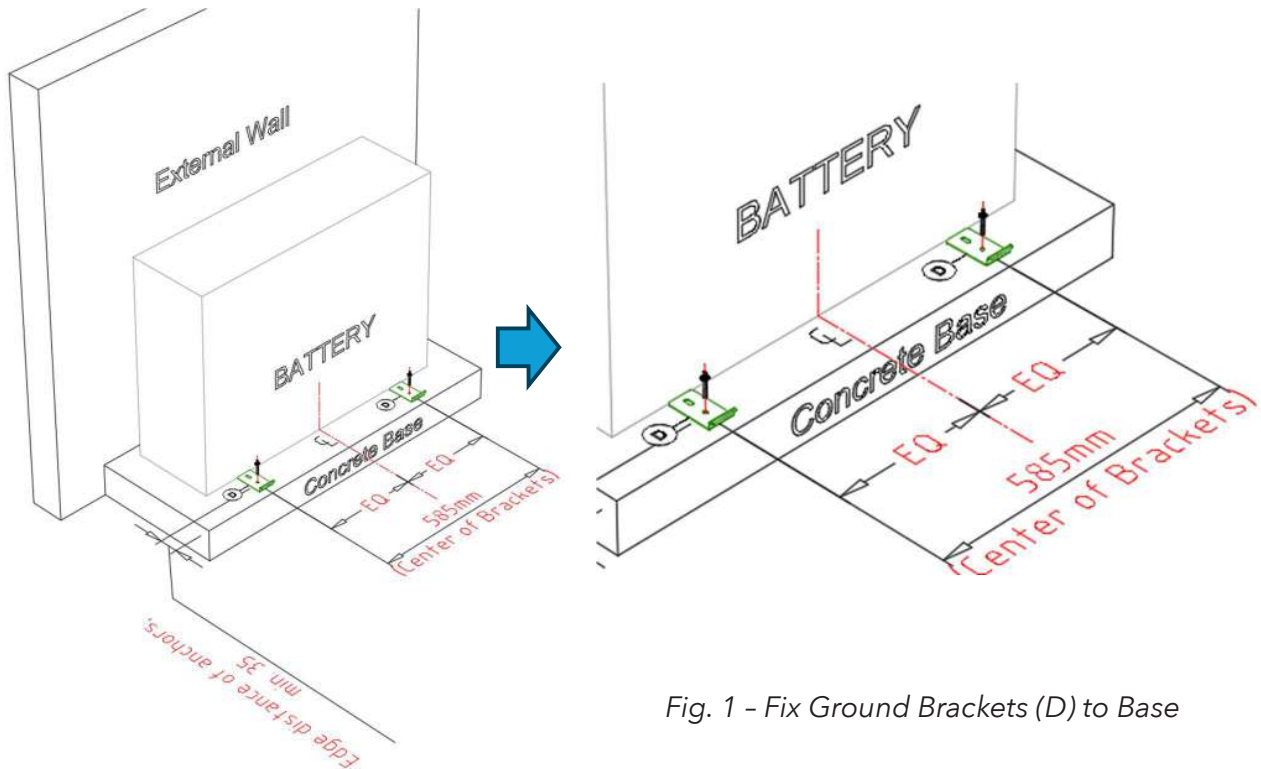


Fig. 1 - Fix Ground Brackets (D) to Base

STEP 2 INSTALL FRONT PANELS (A) for Double and Triple Configurations

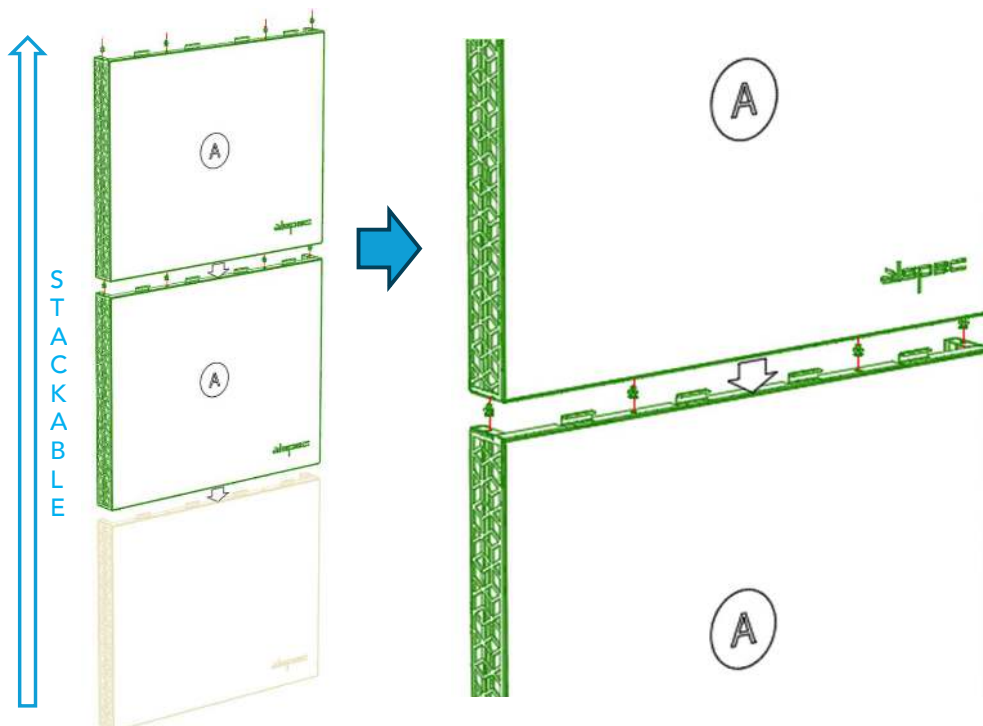


Fig. 2 - Add Extra Height to Front Panel (A)

STEP 3 INSTALL LIDS (B) & (C)

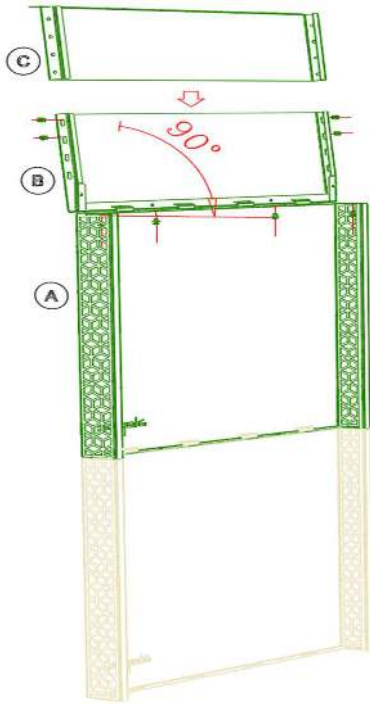


Fig. 3 - Lid (B) alignment to Front Panel (A)

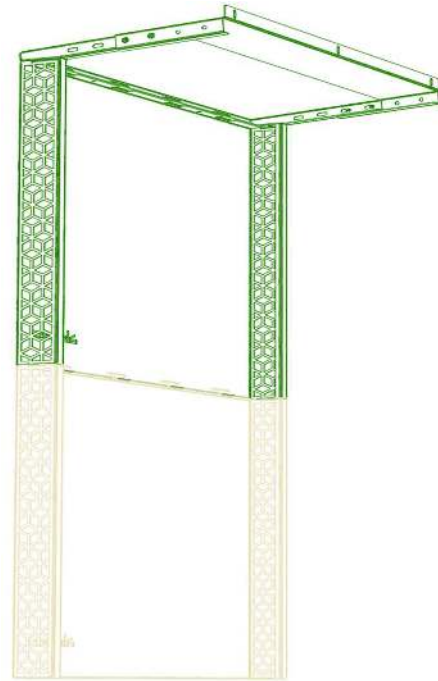


Fig. 4 - Insert M6 bolts/ nuts at the fixing points.

STEP 4 INSTALLATION & FIXING SEQUENCE

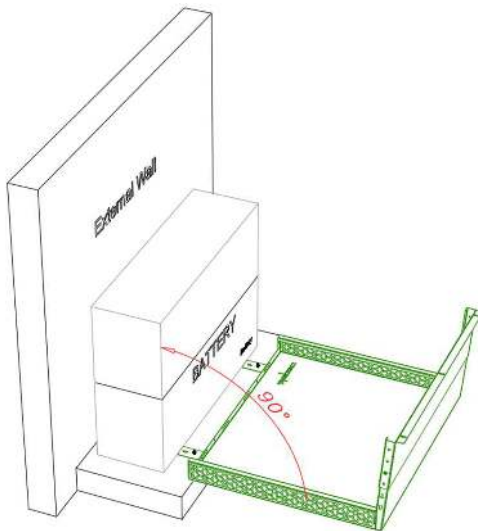


Fig. 5 - Rotate the assembly upward 90°

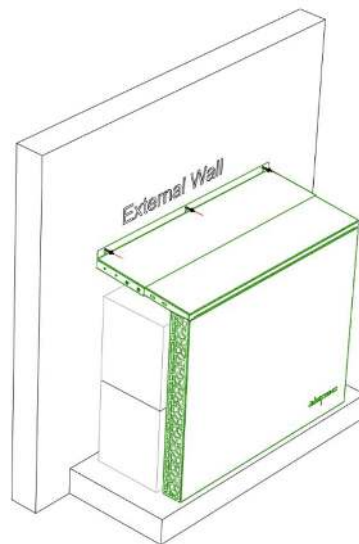


Fig. 6 - Completed installation.

Installation & Fixing Sequence

- Place Lid (B) & rotate Lid (B) downward 90° as shown in Fig. 3 and secure fixings.
- Insert Extendable Lid (C) into Lid (B) as shown in Fig. 3 and secure fixings.
- Adjust Lid (C) to suit the required width and ensure the Battery Cover is straight and properly aligned (as shown in Figs. 5 & 6), then secure fixings.